



Pallet Rider

The exact mounting solution may vary between models.

SEEN equipment to install

- 1 x IRIS 860 sensor SI-120
- 1 x buzzer volume reduction cap SI-133 (may not be required on all machines)
- 1 x IRIS-i camera SI-220

Installer notes

- Follow SEEN's Installation instructions which can be downloaded at seensafety.com/info
- Do not drill into any ROPS or FOPS structural elements
- A DC/DC voltage reducer may be required on battery electric machines
- The sensor settings match the factory default settings and do not need to be changed.

Sensor settings*

CRITICAL ALERT	3m
EARLY WARNING	+1m
REVERSE DEPENDENT ALERT	
Sensor can only alert when the reverse signal is on	
VOLUME	Normal

*A SEEN IRIS 860 Setup Dongle (SI-138) is required if you need to change the sensor settings.

**The upright sensor alignment necessitated by the low mounting position, could result in occasional 'proxy' detections from pallet wrap. If this is a problem please contact SEEN about a low sensitivity setting.

Sensor Location and Angle

■ Sensor location (graphic not to scale)

